CUSTOM DOOR & MIRROR, INC.

THANK YOU FOR YOUR PURCHASE OF YET ANOTHER OF OUR FINE LINE OF QUALITY DOORS.
THIS SLIDING DOOR ARE DESIGNED WITH YOU IN MIND,
THE DO-IT-YOURSELF HOME OR APARTMENT OWNER,
TRY OUR FOUR EASY STEPS TO YOUR NEW LOOK.

SEE DIAGRAMS BELOW FOR INSTALLATION GUIDE.

TOOLS YOU'LL HAVE TO HAVE ON HAND

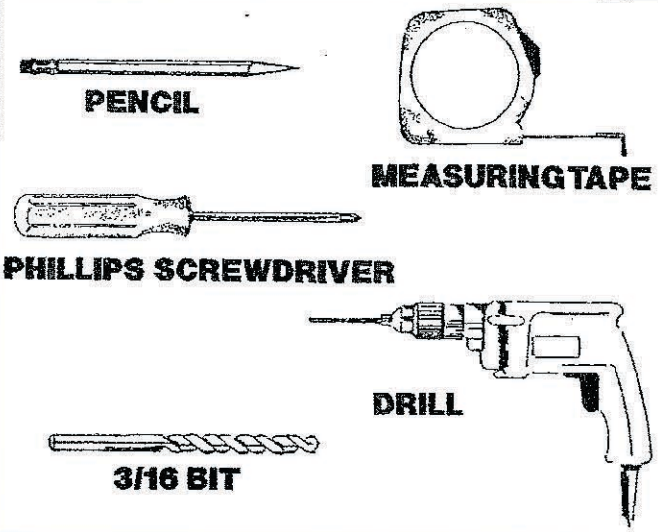

NOTHING ADD'S DEPTH & BRIGHTNESS LIKE A CUSTOM MIRROR DOOR

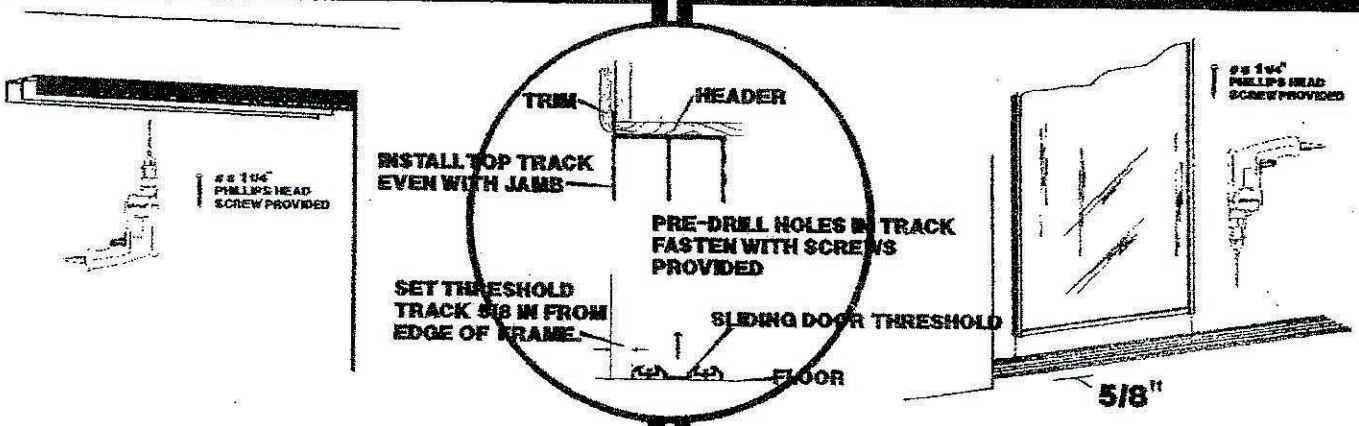
#8 1¼" PHILLIPS HEAD SCREW PROVIDED
TRIM
HEADER
INSTALL TOP TRACK EVEN WITH JAMB
PRE-DRILL HOLES IN TRACK FASTEN WITH SCREWS PROVIDED
SET THRESHOLD TRACK 5/8 IN FROM EDGE OF FRAME
SLIDING DOOR THRESHOLD
FLOOR
5/8"

1 INSTALL TOP REVERSIBLE TRACK FIRST USING SCREWS PROVIDED

2 INSTALL BOTTOM THRESHOLD TRACK 5/8" IN FROM FRONT EDGE OF FRAME

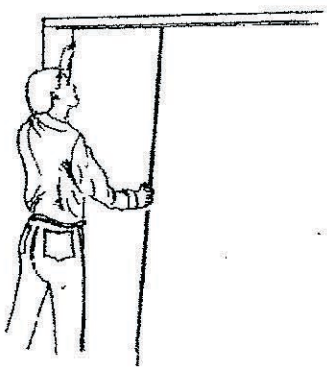

3 NOW YOU READY TO INSTALL THE DOORS BETWEEN TOP & BOTTOM TRACKS.

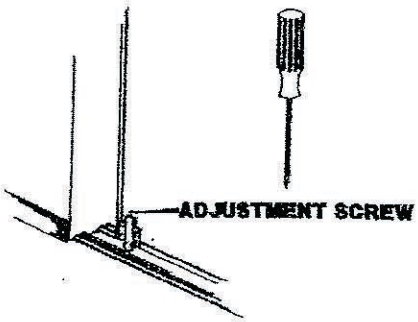

4 NOW IF REQUIRED, YOU CAN MAKE ADJUSTMENTS ON BOTTOM ROLLERS WITH SCREWDRIVER

NOW STAND BACK AND ADMIRE YOUR WORK